

# Doro 1380

## Quick Start Guide

English



### Charge the phone



Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low, is displayed and a warning signal is heard.

- Connect the mains adapter to the wall socket and to the charging socket .

**Tip:** Don't forget to remove the protective plastic film from the display.

## 2. GET TO KNOW YOUR PHONE

### Turn the phone on and off

- Press and hold the red button on the phone to turn it on/off. Confirm with **Yes** to power off.
- If the SIM card is valid but protected with a PIN code (Personal Identification Number), **Input SIM1 PIN** is displayed. Enter the PIN code and press **OK**. Delete with **Clear**.

**Note!** If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

**Trials remain:** # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

- Enter the PUK code and confirm with **OK**.
- Enter a new PIN code and confirm with **OK**.
- Re-enter the new PIN code and confirm with **OK**.

### Start-up wizard

When starting the telephone for the first time, you can use the start-up wizard to set some basic settings.

**Tip:** You can run the start-up wizard later if you want.

### Step-by-step instructions

In this document the arrow (→) indicates next action in the step-by-step instructions.

To confirm an action in the phone, press **OK**. To select an item, scroll or highlight the item using / and then press **OK**.

### Enter text

- Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.
- Press **\*** for a list of special characters. Select the desired character with / and press **OK** to enter it.
- Use / to move the cursor within the text.
- Press **#** to cycle upper case, lower case and numerals.
- Press and hold **#** to change writing language.

### Change language, time and date

The default language is determined by the SIM card.

### Calls

#### Make a call

- Enter the phone number. Delete with **Clear**.
- Press to dial. Press **Abort** to cancel the call.
- Press to end the call.

**Note!** For international calls, always use + before the country code for best operation. Press **\*** twice for the international prefix +.

### Call from the phonebook

- Press **Name** to open the phonebook.
- Use / to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the name.
- Press **Options** → **Call**, alternatively, press to dial the selected entry, or press **Back** to return to standby.

### Receive a call

- Press to answer, or press **Silent** to switch off the ring signal and then **Reject** (busy signal). Alternately, press to reject the call directly.
- Press to end the call.

### Volume control

Use / to adjust the sound volume during a call. The volume level is indicated on the display.

### Silent

Silent is a fixed profile with keypad tone, message tone and ring tone disabled, while vibration, tasks and alarm are unchanged.

- Press and hold **#** to activate and to deactivate silent.

### Call options

During a call the soft keys () give access to additional functions.

### Speed dial

Use **0** and **2-9** to speed dial an entry from standby.

- Press and hold the corresponding button to dial.

### Add speed dial numbers

- Press **Menu** → **Settings** → **Phonebook** → **Speed dial**.
- Select **0** → **Add** and select an entry from the phonebook.
- Press **OK** to confirm.
- Repeat to add speed dial entries for buttons **2-9**.

### SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

### Call log

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

- Press .
- Use / to scroll through the call log.

= Received call

= Dialed call

= Missed call

- Press to dial, or **Options**.

## 3. PHONEBOOK

The Phonebook can store 100 entries with 3 phone numbers in each entry.

### Add a contact

- Press **Menu** → **Phonebook** → **-New contact-** → **Add**.
- Enter a **Name** for the contact, see *Enter text*. Delete with **Clear**.
- Use / to select **Mobile**, **Home** or **Office**, and enter the phone number(s) including the area code.
- When done, press **Save**.

### ICE (In Case of Emergency)

In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. Add ICE contact to improve your own safety. First responders can access additional information such as medication and next of kin from your phone in case of an emergency. All fields are optional, but the more information provided the better.

Press **Menu** → **Phonebook** → **ICE**.

- Use / to scroll the list of entries.
- Press **Edit** to add or edit information in each entry. Delete with **Clear**.
- Press **Save** when done.

## 4. ASSISTANCE BUTTON

The assistance button allows easy access to contact your predefined help numbers should you need help. Make sure that the assistance function is activated before use and make all necessary configurations. Test the application thoroughly.

### Make an assistance call

- When help is needed**, press and hold the assistance button for 3 seconds, or press it twice within 1 second.

The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .

- An assistance text message (SMS) is sent to all recipients. The first **recipient** in the list is dialled. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until is pressed.



When an assistance call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

### Settings

- Press **Menu** → **Settings** → **Assistance**.

## 5. MESSAGES

### Create and send text messages

- Press **Menu** → **Messages** → **Create new** → **SMS**.
- Write your message, see *Enter text*, then press **To**.
- Select a recipient from **Add from Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **OK**.
- You can modify the recipients by selecting one and press **Options** → **Edit/Delete/Delete all**.
- When done, press **Options** → **Send**.

### Create and send picture messages

Both you and the recipient must have subscriptions that support picture message. The settings for picture message are supplied by your service provider and can be sent to you automatically via text message.

- Press **Menu** → **Messages** → **Create new** → **MMS**.
- Write your message, see **Enter text**.
- Press **Options** → **Add picture**:
  - My pictures** to select a file.
  - Take picture** to use the camera to take a picture.

**Note!** To keep best picture quality, send only one picture per message.

You can also **Add sound**, **Add video**, and **Preview MMS** using the **Options** menu.

- Press **Options** → **Add subject** and enter your subject, then press **Options** → **Done**.
- Press **Options** → **To** and select recipient from **Add from Phonebook**. Alternatively, select **Enter recipient** to add recipient manually and press **Options** → **Done**.

- Press **Options** → **Send** to send.

### Settings

- Press **Menu** → **Settings** → **Messages**.

## 6. CAMERA (TAKE PHOTOS)

- Press **Menu** → **Camera**.
- Press **OK** to take the photo.
- Press **Options** or press **Back** to take a new photo (if you do not make any selection the picture is saved).

### Settings

- Press **Menu** → **Settings** → **Camera**.

## 7. BLUETOOTH®

You can connect wirelesses to other Bluetooth® compatible devices such as headsets or other phones.

### Important!

When you are not using Bluetooth® connectivity, turn off **Activate** or **Visibility**. Do not pair with an unknown device.

### Activate Bluetooth®

- Press **Menu** → **Settings** → **Bluetooth** → **Activation** → **On**.
- Press **OK** to confirm.

 
### Search device

- Press **Menu** → **Settings** → **Bluetooth** → **Search device**.
- Select a device from the list and press **Bond** to connect. If Bluetooth® is not enabled, press **Yes** to activate.
- Press **OK** to confirm.

## 8. SOUND & DISPLAY


### Tone setup

- Press **Menu** → **Settings** → **Sound** → **Tone setup** → **SIM1 incoming call**.
- Use / to select one of the available melodies, the melody will be played.
- Press **OK** to confirm or **Back** to discard changes.

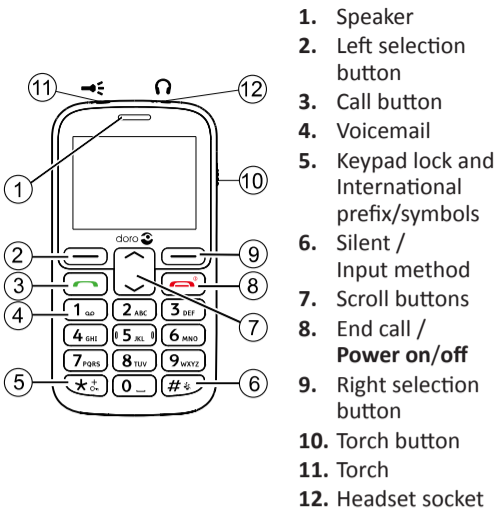

- Speaker
- Left selection button
- Call button
- Voicemail
- Keypad lock and International prefix/symbols
- Silent / Input method
- Scroll buttons
- End call / Power on/off
- Torch button
- Torch
- Headset socket

 www.doro.com

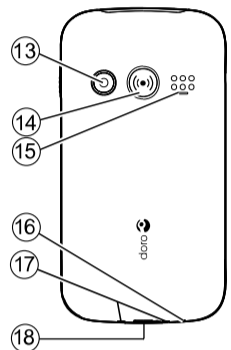

- Camera
- Assistance button
- Loudspeaker
- Microphone
- Charging cradle connectors
- Charging socket


**Note!** All illustrations are for illustrative purposes only and may not accurately depict the actual device. The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

## 1. GET STARTED
 
### SIM card, memory card and battery

#### Remove the battery cover

Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may be damaged.

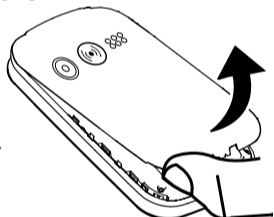


#### Insert SIM card (required)

Remove the battery if it is already installed. There are two SIM card slots, SIM1 and SIM2. If you are to use only one SIM card, we recommend to use SIM1 slot.

Slide the card under the metal part, with the gold-coloured circuit board facing down.

 The cut-off corner of the card helps to you place the card, correct placement is indicated in the compartment.

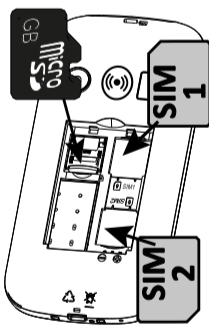

#### Insert SD card (optional)

Press the card's lid carefully towards the assistance button until it "clicks". Lift the lid to an upright position. Make sure the card's contacts are facing downwards. Fold down the lid and carefully push it down, sliding it back in place.

**Note!** The circuit boards (metal part) on the cards must not be scratched or bent. Try not to touch the circuits with your fingers.

#### Insert the battery

Insert the battery by sliding it into the battery compartment with the circuits facing down to the right. Replace the battery cover.

