



Doro 7050

Quick Start Guide


1

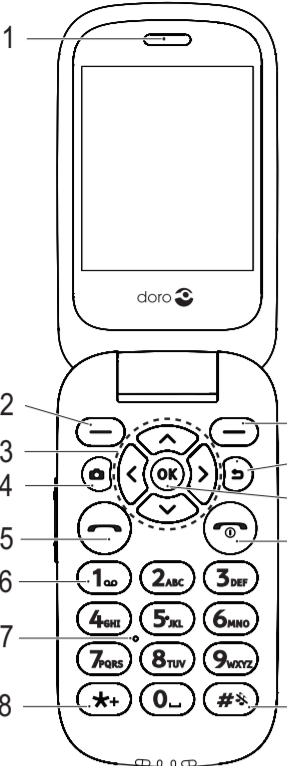


2

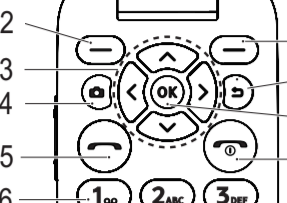


3




4




5




6




7




8




9




10




11



12



13



1. Speaker

2. Left selection button

3. Four-way navigation keys

4. Camera shortcut

5. Call button

6. Voicemail - Speed Dial

7. Microphone

8. International prefix/Symbols

9. Right selection button


10. Back key

11. OK-key


12. End call/Power on/off

13. Input method/Silent mode


14

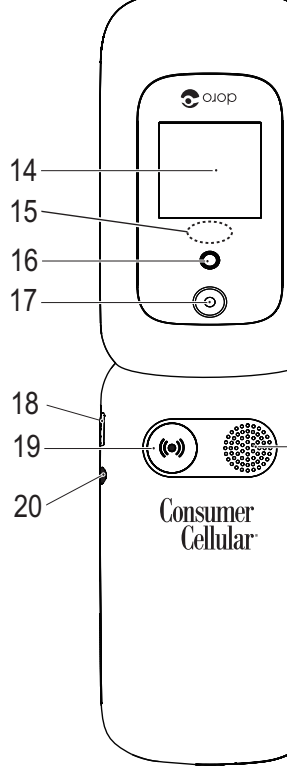


15

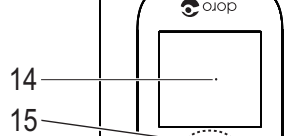


16




17




18




19




20



21



22



14. External screen

15. Green light = New message / missed call

16. Red light = battery level low / charging

17. Camera flash and Flashlight

18. Camera lens

19. Charging socket

20. Headset socket

21. Loudspeaker

22. Volume keys

Note!

All illustrations may not accurately depict the actual device.

The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from Consumer Cellular. The supplied accessories provide the best performance with your phone.

1. GETTING STARTED

When you first receive your phone, you will need to set it up before using it.

Tip:

Remember to remove the plastic screen protector.


1. 1.Insert memory card, SIM card and battery

The SIM card and battery are normally pre-installed. Follow these instructions should you ever need to access them yourself.

Important!

Turn off the phone and disconnect the charger before removing the battery cover.


Remove the battery cover and the battery:

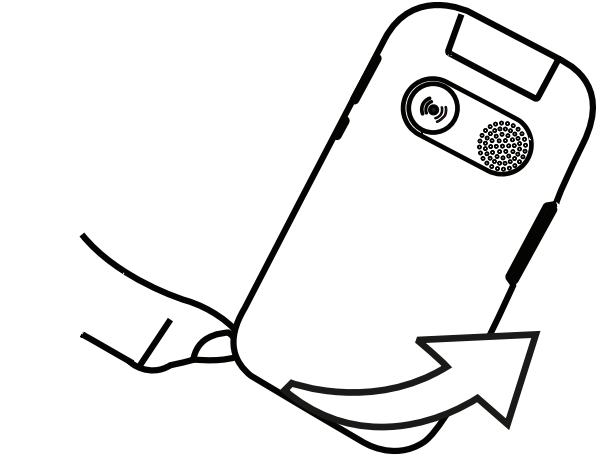

Important!

Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may get damaged.


Insert the SIM card:

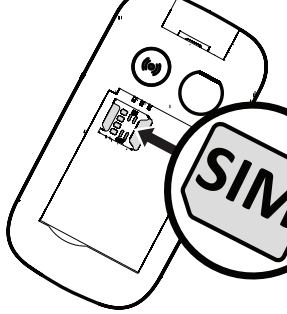

Tip:

Take care not to scratch the metallic contacts on the cards when inserting them into the card holders.


Insert the memory card (optional):

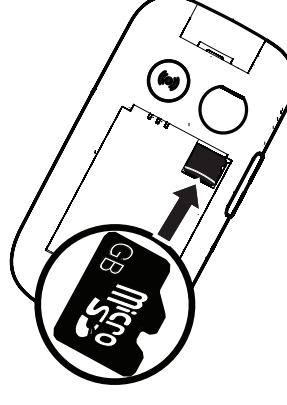

Important!

Use only compatible memory cards with this device. Compatible card types include microSD and microSDHC. Incompatible cards may damage the card itself, the device and corrupt any data stored on the card.

Insert the battery:

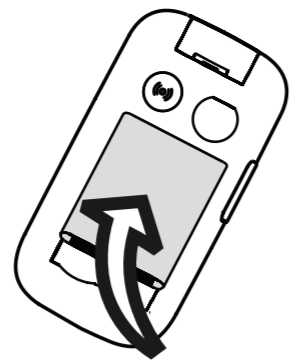


 
Insert the battery by sliding it into the battery compartment. Replace the battery cover.


1. 2.Charge


While it's possible that your phone will already come with enough power to be turned on right out of the box, we recommend charging the device fully before using it.

Caution

Only use batteries, chargers and accessories that have been approved for use with this particular model. Using unapproved accessories may be dangerous and may invalidate the phone's type approval and warranty.

 When the battery is running low,  appears on the screen and a warning signal is heard. Connect the AC power adapter to a wall socket and to the charging socket .

Alternatively connect the cable to the charging socket  on the phone to a USB port on a computer.

If the phone is turned off during charging, the phone is still charging. Press  to view charging status.

1. 3.Save energy

When the battery is fully charged, disconnect the charger from the device and unplug the charger from the wall socket.

To save power, the screen turns off after a while. Press any button to wake the screen up. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use. During extended operation, the device may feel warm. In most cases, this is normal. To avoid getting too warm, the device may switch off during charging.

1. 4.Turn the phone on and off

1. Press and hold  to turn on and off.

2. If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN** appears. Enter the PIN code and press **OK**. Delete by pressing **Clear**.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** appears. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

1. Enter the PUK code and confirm with **OK**.

2. Enter a new PIN code and confirm with **OK**.

3. Re-enter the new PIN code and confirm with **OK**.

Note!

If PIN and PUK codes were not provided with your SIM card, please contact Consumer Cellular.

2. GETTING TO KNOW YOUR PHONE

2. 1.Descriptions in this document

Descriptions in this document are based on your phone's setup at the time of purchase. Instructions normally start from the start screen. Press  to reach the start screen. Some descriptions are simplified. The arrow (➔) indicates next action in step-by-step instructions.

2. 2.Basic phone operations

Call :

Dial a number or answer an incoming call.

Enter the call log.

End call/Power on and off :

End calls or return to the start screen.

Long press to power on or off.

Assistance (Ⓜ):

Long press to make an assistance call.

Back ⏮:

Return to the previous screen.

Camera :

Press to initiate the camera app.

Selection buttons :

The selection buttons have multiple functions. The current function is shown above the selection button on the screen. During a call the selection buttons give access to additional functions.

Navigation keys:

(A) Use the **Four-way navigation keys** to navigate up, down, left and right.

(B) Use the **OK-key** to open the  **Menu** and to confirm actions.



Volume control:

Use + and - on the side of the device to adjust the sound volume. During a phone call, it adjusts the earpiece volume. The volume level is indicated on the screen.

Set the language:

The default language is determined by the SIM card.

 ➔ **Settings** ➔ **Personalization** ➔ **Language**

Set the time and date:

 ➔ **Settings** ➔ **Personalization** ➔ **Date & Time**.

The default language is determined by the SIM card. See the full manual if you would like to change language, time and date.

Notifications on the external screen:

A range of new notifications appears on the external screen. To read them, open the phone and press  **Notices**. Press **Select** to open.

Notification panel on the main screen:

At the top of the main screen you can see if there are any notifications and you will also see the status symbols, such as network signal strength, battery level, Bluetooth activity and more.

2. 3.Quick settings

From the start screen, press  to select **Flashlight**, **Bluetooth** or **Vibration mode**.

Note!

The flashlight drains the battery very quickly. Remember to turn off the flashlight after you are done using it.

2. 4.Enter text

Press the button corresponding to the letter until the appropriate character appears.

Press  for a list of special characters. Select the desired character using the **Four-way navigation key** and press **Select** to enter it.

Use the **Four-way navigation key** to move the cursor within the text.

Press **Clear** or to erase characters.

Press **Options** for more options.

Press  to cycle upper case, lower case and numerals.

Change the writing language:

1. Press and hold  for a list of available languages.

2. Select language with / and press **OK** to confirm.

Enter text with predictive text:

For fast and accurate typing, you can use the intelligent predictive text input method.

1. While texting, press  to select input method.

Enter phone numbers:

Note:

For international calls, always use + before the country code for best operation. Press  twice for the international prefix +.

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. There are two types of pauses available on your phone, press  repeatedly until desired character is shown.

3. CALLS

3. 1.Make a call

1. Enter the phone number.

2. Press  to call.

3. Press  to end the call.

Note!

There is no dial tone. As long as the phone is turned on, it is ready for use.

3. 2.Make a call from the contacts list

1. Press  to open **Contacts**.

2. Use / to scroll through the contacts, or press the button corresponding to the first letter of the name to do a quick search.

3. Press  to dial the selected entry, or press  to return to the start screen.

3. 3.Receive a call

1. To answer an incoming call when the phone is closed, open the phone.

2. Press  to answer.

Silence an incoming call

1. When a call comes in, press **Volume down** to silence the ring signal.

3. 4.Call log

Received, missed, and dialed calls are saved in a call log.

Retrieving and dialing:

1. Press .

2. Use / to scroll through the call log

 = Incoming call

 = Outgoing call

 = Missed call

3. Press  to dial the highlighted number.

4. CONTACTS

From the start screen you can use the softkey  to access your contacts.

4. 1.Create a contact

1. Press  ➔ **Contacts** ➔ **-New- ➔**

2. Enter contact information.

3. Press **Add** to open more information fields.

4. When done, press **OK**.

Tip:

Depending on the selected storage location, the types of information you can save may vary.

4. 2.Contact options

Speed dial:

Use the numerical buttons  –  to speed dial.

 is designated for the voice mailbox

Press and hold  to call the voice mailbox.

 ➔ **Contacts** ➔ **Options** ➔ **Speed dial**

Top 10:

Top 10 are the first 10 listed contacts in the phonebook.

Set a contact as one of your top 10 contacts.

 ➔ **Contacts** ➔ **Options** ➔ **Top 10**

11.MEDIA

On the start screen, press  ➔ **Media** ➔

Video:

Record, store and view videos.

Recorder:

Record and store voice recordings.

Gallery:

View photos taken with the camera and other saved images or downloaded images.

12.ORGANIZER

On the start screen, press  ➔ **Organizer** ➔

Alarm:

Set alarms for timings you shouldn't miss.

Note!

The alarm will not work when the phone is off.

Calendar:

Enter your upcoming tasks and events.

Calculator:

Perform basic math operations.

Note:

Create notes and reminders.

File manager:

Access and manage various files stored in the phone or in the SD card.

4. 3.Create ICE entry (In Case of Emergency)

First responders can access additional information such as medical information from the victim's phone in case of emergency. In the event of an accident, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

1. Press  ➔ **Contacts** ➔ **ICE**.

2. Use / to scroll the list of contacts.

3. Press **Edit** to add or edit information in each field. Delete with **Clear**.

4. Press **Save** when done.

5. EMERGENCY/911 CALLS

As long as the phone is switched on, it is possible to place an emergency call by entering the main local emergency number for your present location followed by . Some networks accept calls to emergency numbers without a valid SIM card. Contact Consumer Cellular for more information.

Note!

Sometimes an emergency call cannot be placed due to network, environment or interference issues.

6. ASSISTANCE BUTTON

The Assistance button on the back of the phone will automatically dial one number for you. This can be used as an easy way to reach a family member or friend if you need help. The Assistance function must be activated before use. See the full manual for instructions.

 ➔ **Settings** ➔ **Assistance**

7. CAMERA

Note:

To get sharp photos, wipe the lens clean with a dry cloth.

1. Press the shortcut button , or, press  ➔ **Camera**.

2. Press  or **OK** to take a photo.

8. MESSAGES

8. 1.Create a message

Create, edit and read messages. A text message will be converted to a picture message automatically when media files (music, video, etc.) are attached.

1. Press  ➔ **Messages** ➔ **New**.

2. Enter the recipients phone number in the **To** field. Or press **Contacts** to select a recipient from your contacts.

3. Scroll through your contacts. Or **Search** a contact by pressing the button corresponding to the first letter of your contact's first or last name or the full name. Press **Select** to select a contact.

4. Press **Contacts** to add more recipients.

5. Select **Message** and type your message.

6. Press **Options** for further options.

Note!

If you choose to send to multiple contacts, you will be charged for each one.

8. 2.Emergency alerts

1. Press  ➔ **Settings** ➔ **Network & Connectivity** ➔ **Wireless Emergency Alerts**.

2. Use the up and down arrow keys to select alert

types.

To turn on or off alerts press **OK**.

1

2

3

4

13.FM RADIO:

Listen to FM radio which has a frequency range from 87.5 to 108.0 MHz. You need to connect a compatible headset that works as antenna.

14.HELP

To get help:

- Download the full manual at ConsumerCellular.com/Doro7050 OR www.doro.com
- You may also view helpful how-to videos at ConsumerCellular.com/Help
- Update your phone's software. Please follow the on-screen instructions when you are notified of a software update.

Tip: Always download and install phone software updates to increase your phone's performance.

- Reset your phone
On the start screen, press  → **Settings** → **Privacy & Security** → **Reset all**

The reason to perform a reset might be a persistent problem that is impossible to solve or if you want to pass the phone to someone else. Note that everything added to the phone since you got it will be erased. SIM card and memory card are not affected.

15. DISCLAIMER AND LIMITATION OF LIABILITY

Doro AB and its affiliates, licensees and retailers assume no responsibility for any damage or loss resulting from the use of this guide. Doro AB and its affiliates or licensees assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Doro AB and its affiliates or licensees assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL DORO AB OR ANY OF ITS AFFILIATES, LICENSEES AND RETAILERS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS," EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY, OR CONTENTS OF THIS DOCUMENT. DORO AB RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

16. FCC/INNOVATION, SCIENCE AND ECONOMIC DEVELOPMENT CANADA (ISED) NOTICE

This device complies with part 15 of the FCC Rules and IS ED license-ex-empt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules/Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The FCC or IS ED can require you to stop using your device if such interference cannot be eliminated.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void he user's authority to operate the equipment.

17. SAFETY INSTRUCTIONS

CAUTION
The device and the accessories can contain small parts. Keep all of the equipment out of the reach of small children. The AC power adapter is the disconnect device between the product and AC power. The AC power outlet must be close to the equipment and easily accessible.

17. 1. Network services and costs

Your device is approved for use on the 4G LTE FDD 2(1900), 4(1700), 5(850), 7 (2600), 12(700), WCDMA 1 (2100) & 2 (1900), 4 (1700), 5 (850) MHz, GSM 850/1800/1900 MHz networks.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

17. 2. Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the device whenever its use is prohibited or can cause interference or hazards. Only use the device in its normal user position.

This device complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 0.6 inches from your body. If the device is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the device should be placed at the distance from your body specified above. Make sure that the distance requirements above are followed. Parts of the device are magnetic. The device can attract metal objects. Do not keep credit cards or other magnet-sensitive media or materials near the device. There is a risk that information stored on them can be erased.

17. 3. Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions.

Comply with any notices at health care facilities instructing you to turn off the device while you are there. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

17. 4. Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should always keep the phone more than 6 inches (15 cm) from their pacemaker when the phone is turned on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

17. 5. Areas with explosion risk

Always turn off the device when you are in an area where there is a risk of explosion. Typically, these are areas where you are requested to turn off your car engine. Follow all signs and instructions.


In these areas, sparks can cause explosion or fire that can lead to personal injury or even death.

Turn off the device at filling stations, and any other place that has gas pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

17. 6. Protect your hearing

WARNING:
 Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

17. 7. Emergency calls

Important!
Mobile phones such as this device use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, you should never rely solely on a mobile phone for very important calls such as medical emergencies.

17. 8. Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the device or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the device while in flight. Turn off the device before you board a plane. Using cellular devices inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

17. 9. Driving safely

Adapted from CTIA-The Wireless Association®

Warning!
Use of this device alone or with headphones (even if used only in one ear) while driving a motor vehicle or riding a bicycle is dangerous and is illegal in some areas. Driving while operating a mobile phone is distracting and could cause serious injury or death.

If you use this device while driving or riding a bicycle, keep in mind the following guidelines:

- Give full attention to driving and to the road.**
Using a mobile device while driving may be distracting. If you find it disruptive or distracting while operating any type of vehicle, riding a bicycle, or performing any activity that requires your full attention, pull off the road and park before making or answering a call.
- Get to know your phone and its features such as phone book, call memory, and speakerphone.**
These features help you to place your call without taking your attention off the road. See the applicable portion of this user's guide for more information.
- Use a hands-free device.**
Add an extra layer of convenience and safety to your unit with one of the many hands-free accessories available.
Use of a headset or other hands-free device may be legally required. Several states have in recent years passed laws making it unlawful to operate a motor vehicle while talking on a wireless phone without use of a headset, speakerphone, or other hands-free device. County and municipal ordinances may also limit or ban wireless conversations for automobile drivers. Check the status of such laws in your area and in locations to which you travel by car. For text messaging, it is a recommended safety practice that you never send or view received text messages while driving; in California, and likely other states in the future, text messaging by a driver is also a legal violation.
- Position phone within easy reach.**
Keep your eyes on the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

- Assess the traffic before dialing, or place calls when you are not moving or before pulling into traffic.**
Try to plan calls when your car will be stationary. Never dial, send text messages, or enter other text while you are driving.
- Let the person you are speaking with know you are driving.**
If necessary, suspend the call in heavy traffic or hazardous weather conditions. Driving in rain, sleet, snow, ice, fog, and even heavy traffic can be hazardous.
- Do not take notes, look up phone numbers, or perform any other activities that require your attention while driving.**
Jotting down a to-do list or flipping through your address book takes attention away from your primary responsibility: driving safely.
- Do not engage in stressful or emotional conversations that may be distracting.**
Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

17. 10. RF exposure information (SAR)

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.22 W/kg and when worn on the body, as described in this user guide, is 1.26 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.) While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on **FCC ID: W55DFC0180**.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 0.4 inch (1.0 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

If you do not u se a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 0.4 inch (1.0 cm) from your body when the phone is switched on.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

17. 11. Hearing aid compatibility

Note! For hearing aid compatibility, you should turn off the Bluetooth connectivity.

Your mobile device model complies with FCC rules (C63.19-2011) governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M-value, shown on the device box and below, refers to lower radio frequency (RF) emissions. A higher M-value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids. Some hearing aids are more immune than others are to interference. Please consult your hearing health professional to determine the M rating of your hearing aid and whether your hearing aid will work with this device.

Your device meets the M4/T4 level rating.

There may however be some newer wireless technologies used in this device that have not yet been tested for use with hearing aids. It is important to try the different features of this device thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interference. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

17. 12. TTY compatibility

Your phone is TTY-compatible, allowing you to connect a TTY device to the phone's headset jack. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Before you can use your phone with a TTY device, you'll need to enable TTY Mode.

18. CARE AND MAINTENANCE

Your device should be treated with the greatest care. Negligence may void the warranty.


- Protect the device from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the device gets wet, you should remove the battery and allow the device to dry completely before you replace it.
- Do not use or keep the device in dusty, dirty environments. The device's moving parts and electronic components can be damaged.
- Do not keep the device in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the device in cold places. When the device warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the device in any other way than that which is indicated here.
- Do not drop the device. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the device.
- Do not disassemble or open; crush, bend or deform; puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std- 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.

For host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

The advice above applies to the device, battery, AC power adapter and other accessories. If the phone is not working as it should, please contact Consumer Cellular for service. Don't forget the receipt or a copy of the invoice.

18. 1. Battery disposal and recycling information

When the battery in this device has reached the end of its useful life, please dispose of it according to your local environmental laws and regulations. For information about recycling cell phone batteries, go to: <https://www.call2recycle.org/>

 The symbol to the left means that according to local laws and regulations your product should be disposed of separately from household waste. When the battery in this device has reached the end of its useful life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your device will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

19. WARRANTY AND TECHNICAL INFORMATION

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a malfunction occurring during this period, please contact Consumer Cellular. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a malfunction caused by an accident or a similar incident or damage, liquid penetration, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any malfunction caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunder-storm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

Note! This guarantee does not affect your legal (statutory) rights under your applicable national laws relating to the sale of consumer products.

19. 1. Copyright and other notices

Consumer Cellular and the Consumer Cellular logo are trademarks of Consumer Cellular, Inc.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

vCard is a trademark of the Internet Mail Consortium.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

microSD is a trademark of the SD Card Association.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.

Google, Google Maps™, Gmail, Google Calendar, Google Checkout, Hangouts, YouTube, the YouTube logo, Picasa and Android are trademarks or registered trademarks of Google, Inc.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and noncommercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG- 4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See www.mpegla.com. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensor's be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end user support of third-party apps provided with your device.

19. 2. Content copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

19. 3. Support

For assistance, please contact:

Website: ConsumerCellular.com/Help
Telephone: (800) 686-4460

19. 4. Need to test your cell phone?

At anytime you can place a mobile phone test call to our FREE test line by dialing (888) 460-8781 from your cellular phone.

If the call is completed correctly you will hear a recorded message telling you that your mobile phone is working.

19. 5. Check your minutes or change your plan.

With Consumer Cellular you are in control and can change your plan at any time. To check your usage and change your plan, go to ConsumerCellular.com/MyAccount

Or call (888) 373-1777 any time. The call is free.

19. 6. Specifications

Network:	
4G LTE FDD	2(1900), 4(1700), 5(850), 7 (2600), 12(700) MHz
3G WCDMA	1 (2100), 2 (1900), 4 (1700), 5 (850) MHz
2G GSM	850, 1800, 1900 MHz
Bluetooth, version:	4.1, 2402 - 2480 MHz
GPS receiver:	Category 3
Operating system:	Kai OS 2.5
SIM card size:	Micro-SIM (3FF)
Dimensions:	4.3 in x 2.2 in x 0.8 in
Weight:	4.4 oz (including battery)
Battery:	3.7 V / 1350 mAh Li-ion battery
Operating ambient temperature	Min: 32° F (0° C) Max: 104° F (40° C)
Charging ambient temperature	Min: 32° F (0° C) Max: 104° F (40° C)
Storage temperature	Min:-4° F (-20° C) Max: 140° F (60° C)

© 2018 Doro AB. All rights reserved.

FCC ID: W55DFC0180

Model: DFC-0180

Doro 7050 (1021)

English QSG

Version 1.0

www.doro.com

