 


Doro Tablet

 
Quick Start Guide

English


BACKSIDE OVERVIEW

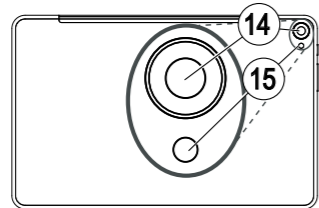

DESK STAND

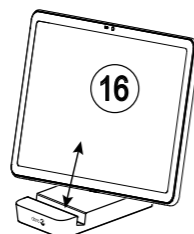

FRONTSIDE OVERVIEW

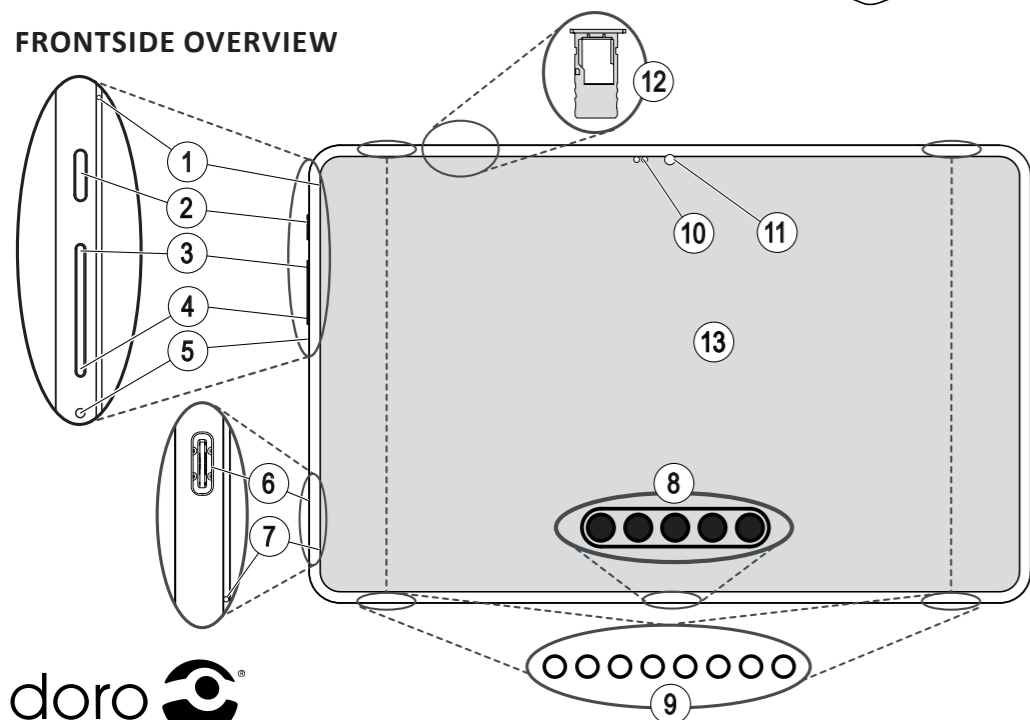 

1. **First microphone**
2. **Power button**, press and hold to turn tablet on/off
3. **Volume UP button**
4. **Volume DOWN button**
5. **Reset pinhole**, press with a paper clip or similar to reboot the hardware.
6. **USB Type-C**, for battery charging or connection to other devices like a computer or headset
7. **Second microphone**
8. **Keyboard connector** (for the compatible keyboard accessory)
9. **4 x loudspeaker**
10. **Proximity/light sensors**, adjusts the display based on the ambient light and turns off the display when covered.
11. **Front camera**, selfie camera
12. **Memory card tray**
13. **Touch screen**
14. **Rear camera**
15. **Flash**
16. **Desk stand**
Thin slot: Tablet only
Wide slot: Tablet with protection cover accessory

4. CHARGE YOUR TABLET

Your tablet may already come with enough charge to be powered on right out of the box, but we recommended to give it a full charge before first using it.

⚠ CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the tablet's type approval and guarantee.

Insert the small end of the included USB cable into the charging port (USB Type-C) on the tablet and other end into the wall charger that you plug into to a wall socket.

5. TURN ON THE TABLET

Note! When turning on your tablet, the installed applications may need to be updated. Application updates requires Internet connection and can take a few minutes. The tablet may appear a bit slow during the update.

- Press and hold the power button until the display lights up.
- Wait for the tablet to start.
- Follow the startup guide to get on the Internet and start personalising your tablet.
- Sign in with an existing Google account or setup a new account.

6. STARTUP GUIDE

The first time you turn on your tablet, a Startup guide is launched. Follow the instructions to start personalising your tablet.

7. CONNECT TO THE INTERNET

With this tablet you can access the Internet, send and receive emails, install apps and games, and check your social networking sites, like Facebook and Twitter, for this you need to be connected to Internet. You may already have Wi-Fi in your home and it's often available at workplaces. Take advantage of free networks in coffee shops, hotels, trains and libraries. Connecting to the Internet with Wi-Fi doesn't incur additional data traffic costs, unless you have to pay to get on the wireless network. Unless you didn't configured an internet access in the startup wizard, when first starting your tablet, here are the instructions on how to do it.

1. From the Home screen, tap **Set** → **My internet connection** → **Wi-Fi**.
2. Switch **Wi-Fi** to enable. Available networks are displayed in a list. The networks can be open or secured (🔒).
3. Tap the wanted network and tap **Connect**.
4. If secured, enter the password. Tap **Show password** to see the password in clear text.

Tip: 📶 is shown in the status bar when connected.

You can easily turn on and off Wi-Fi from the quick settings in the notification panel. To open the notification panel, swipe the status bar down.

Note! Keep in mind that your tablet remembers Wi-Fi networks you connect to. If Wi-Fi is turned on, the tablet automatically connects to the network next time you are within reach. Some open networks require you to log in to a webpage before gaining access to the network.

1. UNBOX YOUR TABLET

The first step is to unbox the tablet and assess the items and equipment included in the delivery. Make sure to read through the manual so you can familiarise yourself with the equipment and the basic functions.

For the full manual please visit www.doro.com/support/ or contact our Helpline. The items supplied with the device and any available accessories may vary depending on the region or service provider.

- The supplied items are designed for this device and may not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- You can purchase additional accessories from your local Doro retailer. Make sure they are compatible with the device before purchase.

2. GETTING STARTED

Before you start using your tablet you may need:

- **Wi-Fi access.** You need to have a Wi-Fi access point available to establish Internet access. You will be guided through a Wi-Fi setup when starting the tablet for the first time. See also "7. Connect to the Internet".
- **Memory card (optional).** You can use a memory card (MicroSD) to increase the storage space of your tablet to be able to store more files, pictures, videos etc. Insert a memory card and follow the instruction to select how to use your memory card. We suggest you to use a high speed memory card.

8. HARDWARE REBOOT

Should you need to reboot the hardware, if your device becomes frozen and unresponsive, press and hold the **Power button** for more than 8 seconds to reboot it. After the device is rebooted, it will restart automatically.

Alternatively, gently press with a paper clip or similar into the reset pinhole to reboot the hardware.

9. HELP AND MORE SUPPORT

Press **Help** ⓘ to find step by step tutorials for you to discover more features of your tablet.

You can find help regarding Android on <https://support.google.com/android/>.

Doro Tablet comes with the best Google apps pre-installed, so it's ready to use right out of the box. Google Search, Google Maps, Chrome, YouTube, Gmail, Google Drive, and so much more — ready for you to enjoy on your device. And with Google Play Store you can access your favorite digital entertainment. Choose from millions of apps, books, songs, movies, and games.

You can find help regarding the Google apps on:

<https://support.google.com/>

Select the app you need help with.

 
Remote help

With QuickSupport from Teamviewer you can receive tech support from a relative. They can with a computer or other smart device together with the Teamviewer app remotely access, control and view your tablet, if you need assistance.

- **Google™ account:** To be able to fully use your tablet you need a Google account. If you don't have one yet, no worries, as you will be guided through an account setup when starting the tablet for the first time. It can however be a good idea to think of a Username and Password as these will be used for many services, such as *Gmail™*, *Google Drive™*, *Google Photos™* and other Google products.

3. INSERT MEMORY CARD (OPTIONAL AND NOT INCLUDED)

1. Use the supplied ejection pin tool to eject the card tray by carefully pressing the thin side into the hole. Make sure that the pin is perpendicular to the hole to not damage the device or pin.
2. Gently pull out the tray from the tray slot.
3. Place the memory card in the tray. Make sure that the memory card's gold-coloured contacts are facing downwards, as shown. Compatible card type: MicroSD, MicroSDHC, MicroSDXC.
4. Gently insert the card tray back into its slot.

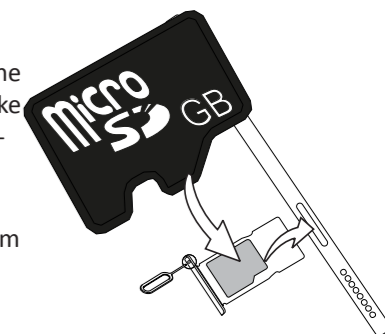

Note! You might need to restart the tablet in order for the memory card to be detected.

